

Ricoh® 4080/4081 Belt Replacement

Oasis Imaging Products, Inc. Technical Support: (888) 627-6555

Recommended Tools: Approximate Remanufacturing

Phillips head screwdriver Time: 15-20 min.

Small flat head screwdriver

Instructions:

1. Remove two screws on corona assembly. The corona grid unit has spring tension and and be removed by first pushing it to the left and then lifting off (Fig. 1).
2. Remove four screws on bottom of belt housing (Fig. 2).
 - a. Lift cover off carefully.
 - b. Note the location of the wire springs.
3. Remove the two spring assemblies.
4. Lift belt assembly up and out of housing and remove belt.
5. Vacuum and clean housing of all loose toner.
6. Slide new belt on, return belt assembly to housing.
7. Replace springs on shaft, and hold cover up at an angle (spring rods fit into grooves in housing).
8. Install the housing and secure with four screws.
9. Install corona grid and secure with two screws

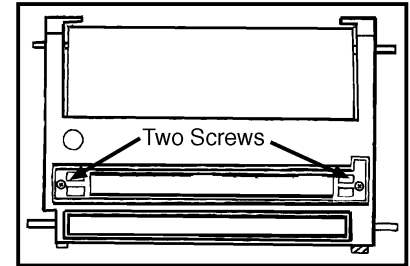


Figure 1

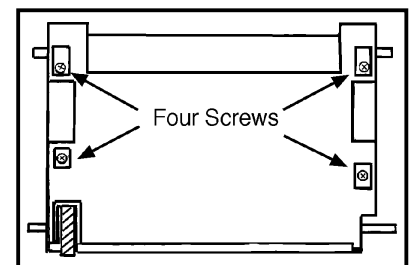


Figure 2

Printer Compatibility:

ADVANCED TECH INTL 0880

APOLLO COMPUTER LP800

BURROUGHS AP 9206, AP 9208

DEC LN 03, 03 IC/P, 03 IMAGEPRINTER,

03 PLUS, RF-LN 03, RF-LN 03 TEMPEST

RF-LN 03S, RF-LN 03S TEMPEST

SCRIPTPRINTER

DIGITAL DESIGN CHECK PTR636 MICR

HONEYWELL MODEL 80, PRT 7550

PRU 7260, PRU 7261, PRU 7262

PRU 9960, PRU 9961, PRU 9962

LASERMASTER 4081

OASYS LASERPRO 810-R

PERSONAL COMP LASERIMAGE 2020

QUADRAM QUADLASER POSTSCRIPT, PLUS

RICOH LP 4080, 4080 R, 4081, 4081 E, 4081 R1

TI OMNILASER 2108

TROY 308 MICR

UNISYS AP 9208

WALLACE COMP SERV TI 2108