

Fuji® XP 5/10

Remanufacturing Instructions



Oasis Imaging Products, Inc. Technical Support: (888) 627-4746

Reference Information:

OEM PN: M1960G/A
OEM Yield: 3,000
(5% coverage)

Remanufacturing

Time: 35 min.

Recommended Tools:

Phillips head screwdriver
Jewelers screwdriver
Pliers
Glue
Utility Knife

Printer Compatibility

APPLE LASERWRITER SELECT 300, 310, 360
PANAFAX UF 755
STAR MICRONICS LS-5, LS5EX, LS5TT
XEROX 4010

Instructions:

1. Push in locking pins (Figs. 1 & 2) with jewelers screwdriver until top cover springs open.
2. Remove the OPC hub screws (Figs. 1 & 2) and remove hubs.
3. Remove the OPC. Clean, inspect, and replace if necessary. Store in a dark place.
4. Remove toner cap and doctor blade (2 screws) (Fig. 3). Use compressed air or a vacuum to clean out the toner hopper. Replace the doctor blade.
5. Remove pins from pin holder (Fig. 4).
6. Remove, clean and inspect the PCR (Fig 4).
7. Vacuum excess waste toner from waste hopper.
8. Clean all contacts.
9. Remove end plate, and lift out mag roller. Clean and inspect the mag roller sleeve and contacts.
10. Replace mag roller and end plate.
11. Fill hopper with toner and replace cap.
12. Replace PCR and OPC. Screw the gear hubs back in place.
13. Reassemble cartridge, pushing pins back into place to secure

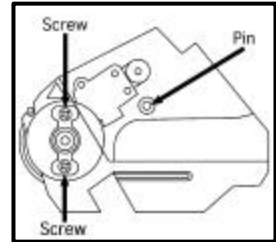


Figure 1

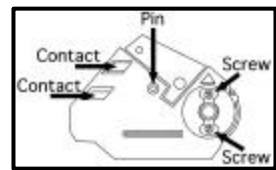


Figure 2

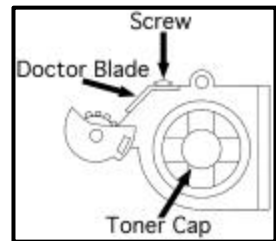


Figure 3

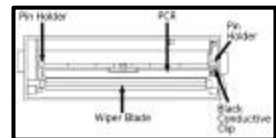


Figure 4

New Hampshire	Georgia	Illinois	Texas	California	Canada	Europe	Australia
(603) 880-3991	(770) 425-6556	(847) 678-4550	(972) 613-0200	(714) 508-1530	(905) 795-0636	011-31-24-388-2233	011-613- 9580-1544
(800) 322-8992	(800) 210-3150	(800) 354-4080	(800) 210-0363	(800) 822-7661	(800) 430-7886	Fx: 011-31-24-2233	Fx: 011-613- 9580- 9722
Fx: (603) 598-4277	Fx: (770) 425-3166	Fx: (770) 678-4833	Fx: (972) 613-9850	Fx: (714) 508-1540	Fx: (905) 795-0983		

© 1998 Oasis Imaging Products, Inc. Any attempt to reproduce any part of these instructions without the written consent of Oasis Imaging Products, Inc. may result in legal action. All registered trademarks are the property of their respective owners.